

 
RAIDON

iT5440 快速安裝導引

產品外觀圖與包裝內容物

前視圖

背視圖



- | | | |
|----------|--------------------------|--------------------------|
| 1.靜音鍵 | 5.電源與警示 LED | 9.SATA 7-pin 埠 (Drive 4) |
| 2.硬碟 LED | 6.SATA 7-pin 埠 (Drive 1) | 10.SATA 15-pin 電源埠 |
| 3.硬碟托盤鎖 | 7.SATA 7-pin 埠 (Drive 2) | 11.風扇 |
| 4.硬碟托盤把手 | 8.SATA 7-pin 埠 (Drive 3) | 12.風扇連接埠 |

打開包裝外盒後，包裝內容應包含下列組件：

- iT5440 x1
- 快速安裝導引 x1
- 螺絲與鑰匙

請注意：

- 請檢查產品和所有隨附附件是否有損傷或缺失零件。如果您遇到任何問題，請聯絡您的產品供應商。
- 如需更多資訊、資源和下載相關資料，請造訪 RAIDON 官方網站 www.RaidonTek.com。



v0.2 (Aug. 2026)

1

LED 燈號說明

狀態	硬碟 LED	電源與警示 LED	蜂鳴器
電源開啟	----	藍燈恆亮	----
待機	----	藍燈恆亮	----
資料存取中	藍燈閃爍	藍燈恆亮	----
溫度過高	----	藍/紫燈閃爍	鳴叫
風扇異常	----	藍/紫燈閃爍	鳴叫

註1：依據SSD的設計，某些SSD在待機時，燈號並不會亮起。

註2：依據SSD的設計，某些SSD在資料存取時，燈號並不會閃爍。

硬體安裝

請依照以下步驟安裝iT5440：

1. 安裝iT5440：將 iT5440 放入電腦機箱，並使用提供的螺絲將其牢固地固定在所需的托架位置。然後，進行必要的連接。


2. 解開硬碟托盤：使用隨附的鑰匙解鎖硬碟托盤，將托盤彈出按鈕向右推，然後將硬碟托盤拉出。



2

3. 安裝2.5吋SATA硬碟或SSD：插入 2.5 吋 SATA 硬碟/固態硬碟，然後用螺絲固定。

4. 插入硬碟托盤：將硬碟托盤放回iT5440中。

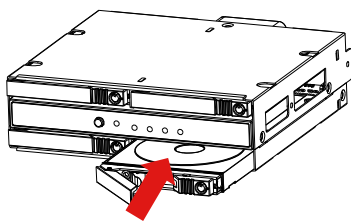

5. 開啟電源：請開啟系統電源，作業系統應會自動偵測硬碟。

6. 格式化硬碟：如果必要，請依照作業系統指示格式化硬碟。

3

使用前注意事項

1. 資料備份 – 請確保備份所有重要文件
2. 接地 – 透過接地措施防止靜電放電
3. 拔掉電源 – 安裝前請關閉並拔掉電腦電源線
4. 使用防靜電表面 – 避免在地毯或導電表面上操作
5. 閱讀說明 – 開始操作前，請仔細閱讀所有步驟

感謝您選擇 RAIDON 產品!

請注意，本手冊中的資訊在出版時是正確的，但產品規格在出貨前可能已變更。有關最新規格與更新，請造訪 www.RaidonTek.com 或聯絡您的經銷商。

如果您對 RAIDON 產品有任何疑問，或是要取得最新的產品手冊或軟體更新，請發送電子郵件到 supporting@raidontek.com

 
4

RAIDON


iT5440 Quick Installation Guide

Product Diagrams and Package Contents

Front View



Rear View

 

- | | | |
|------------------------|------------------------------|---------------------------------|
| 1. Mute Button | 5. Power & Alarm LED | 9. SATA 7-pin Port (Drive 4) |
| 2. Drive LED | 6. SATA 7-pin Port (Drive 1) | 10. SATA 15-pin Power Connector |
| 3. Drive Tray Key Lock | 7. SATA 7-pin Port (Drive 2) | 11. Fan |
| 4. Drive Tray Handle | 8. SATA 7-pin Port (Drive 3) | 12. Fan Connector |

Package Contents:

- iT5440 x1
- Quick Installation Guide x1
- Screws & Keys

Please Note:

- Check the product and all included accessories for defects or missing parts. If you encounter any issues, contact your product supplier.
- For additional information, resources, and downloads, please visit the RAIDON official website at www.RaidonTek.com.



v0.2 (Aug. 2026)

1

LED Status Guide

Status	Drive LED	Power & Fail LED	Buzzer
Power On	----	Blue light always On	----
Idle	----	Blue light always On	----
Data Accessing	Blue light flashing	Blue light always On	----
Over Temperature	----	Blue / Purple light flashing	On
Fan Failed	----	Blue / Purple light flashing	On

Note 1: Based on the SSD design, for some SSDs, LED will light on when it's idle.

Note 2: Based on the SSD design, for some SSDs, LED will not flash when it's accessing.

Hardware Installation

Follow these steps to install the iT5440:

1. Install the Unit: Place the iT5440 into your computer chassis, securing it properly in the desired bay position using the screws provided. Then, make the necessary connections.


2. Unlock the Disk Tray: Use the provided key to unlock the Disk Tray. Push the tray ejection button to the right, and pull the Disk Tray out.



2

3. Install the 2.5" SATA HDD / SSD: Insert the 2.5" SATA HDD/SSD, and then secure it using the screws.

4. Insert the Disk Tray: Place the Disk Tray back into the iT5440 unit.

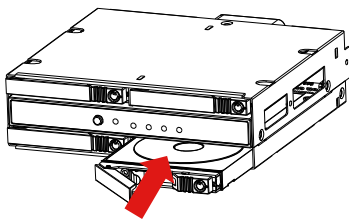

5. Power On: Once installation is complete, power on the system. The operating system should automatically detect the disk.

6. Formatting the Disk: If prompted by the operating system, follow the steps to format the disk. After formatting, the disk will be ready for use.

3

Precautions Before Use

- 1. Backup Data** – Ensure you have a backup of all important files.
- 2. Ground Yourself** – Prevent static discharge by grounding yourself.
- 3. Unplug Power** – Turn off and unplug your computer before installation.
- 4. Use a Static-Free Surface** – Avoid working on carpets or conductive surfaces.
- 5. Read Instructions** – Review all steps before starting.

Thank you for choosing RAIDON products!

Please note that the information in this manual was accurate at the time of publication, but product specifications may have changed prior to shipping. For the latest specifications and updates, visit www.RaidonTek.com or contact your sales representative.

For any inquiries about RAIDON products, or to receive the latest product manuals or firmware updates, please email us at: supporting@raidontek.com.

4